


SHAD

DUCATI DEAVEL 1200 '14


D0DV14IF

3P
SYSTEM

DESIGNED IN
BARCELONA

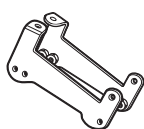

1 261881 x1 →
261882 x1 ←

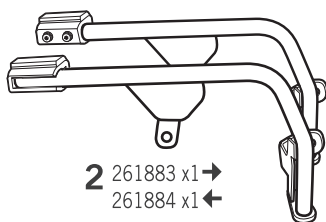

2 261883 x1 →
261884 x1 ←



3 303020 x8
Ø8



4 304028 x8
M8 x 25 Din 7380

! WARNING!

(GB)

To complete the set, remember to purchase the backrest with your preferred color. Do not fully tighten. Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

Para completar el conjunto, recuerde adquirir el respaldo con su color preferido. No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Wählen Sie die Rückenlehne in der passenden Farbe um den Satz zu vervollständigen. Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Per completare il set, non dimentichi di acquistare lo schienalino con il suo colore preferito. Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Pour compléter l'ensemble, rappelez d'acheter le dossierer avec votre coloris préféré. Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

