



INSTALLATION INSTRUCTIONS

PART NUMBER: KT- 5201DK

This Filter Fits: KT- 5201

The K&N Drycharger is a specially designed filter wrap made to extend the service interval of your K&N Air Filter when used in very dirty, muddy or dusty conditions. They are made from a highly durable silicone treated polyester material containing uniform micron openings. The Drycharger will stop small dirt particles with minimal restriction to the airflow of the filter. The Drycharger is designed to be run dry and can be cleaned with K&N Filter Cleaner or soap and water. The Drycharger is custom made to fit each application.

INSTALLATION:

1. Install the K&N Drycharger body onto the K&N Air Filter. (Fig. 1) The seam on the Drycharger will line up with the bump on the K&N Air Filter. (Fig. 1a)
NOTE: Do not install the Drycharger top onto the Drycharger body at this time.
2. Install the K&N Air Filter into the air box per the KT-5201 instruction sheet following steps 1-10.
3. When installing the K&N XStream Top it may be necessary to move the material of the Drycharger so it does not interfere with the seal of the XStream Top. (Fig. 2)
4. Install the Drycharger top on the base. (Fig. 3)
5. Install the K&N Custom Bolt Assembly and tighten.



Fig. 1



Fig. 1a

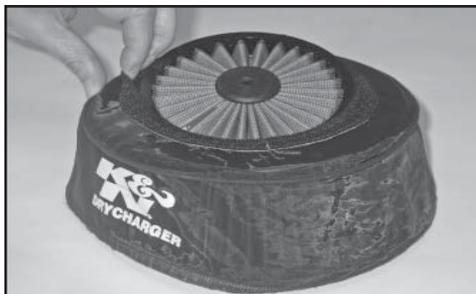
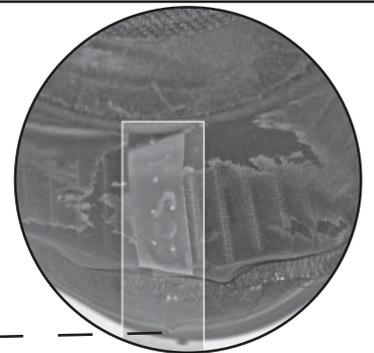


Fig. 2



Fig. 3