


SHAD

SUZUKI V-STROM 1000 '14-'19 SUZUKI V-STROM 1050 '20 / 1050 XT '20

SOVS104P

4P
SYSTEM

DESIGNED IN
BARCELONA

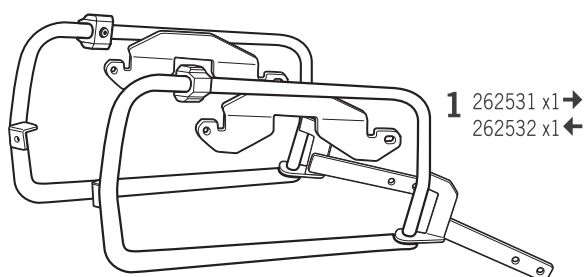

1 262531 x1 →
262532 x1 ←

2 260983 x4
Ø14 Ø9 x 29

3 303017 x16
Ø6

4 303099 x4
Ø6

5 304071 x4
M6 x 50 Din 912

6 302021 x6
M6

7 304079 x4
M6 x 30
Din 912

8 262533 x1

9 304052 x2
M6 x 20
Din 7380

10 260648 x4
Ø16 Ø9 x 5

! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

V-STROM 1000 '14-'19 V-STROM 1050 '20

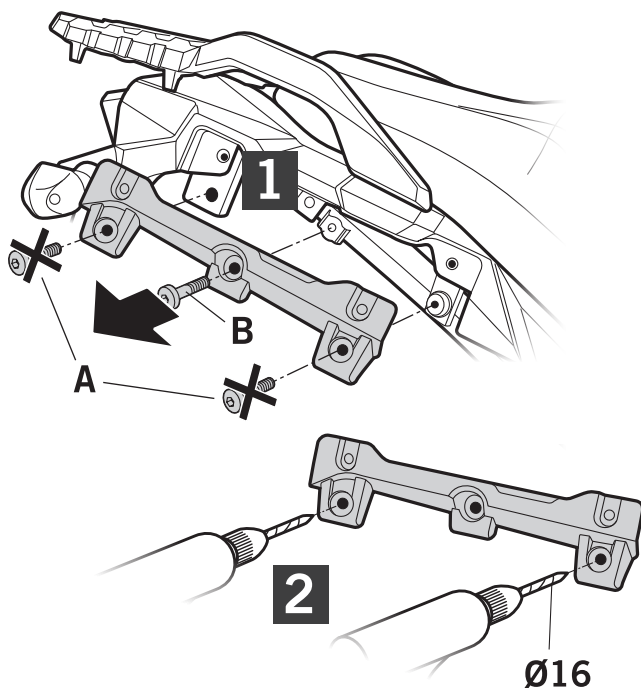

V-STROM 1050 XT '20

